


TYSSO®


PRP-350

Kitchen Thermal Printer Quick Installation Guide

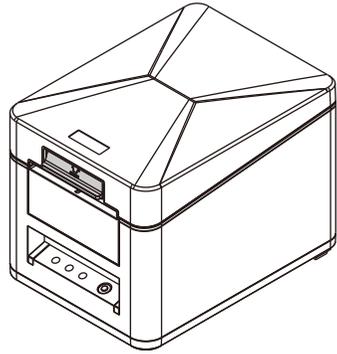


CE FC

Product Overview

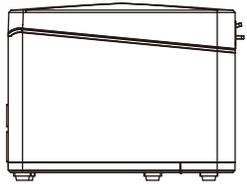

Left

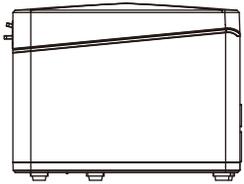


Right




Front



Rear

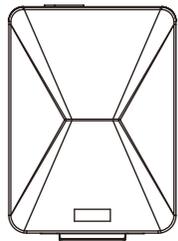


TOP

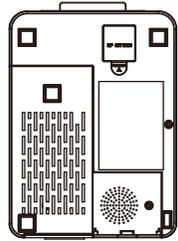

Bottom

Installing your Printer

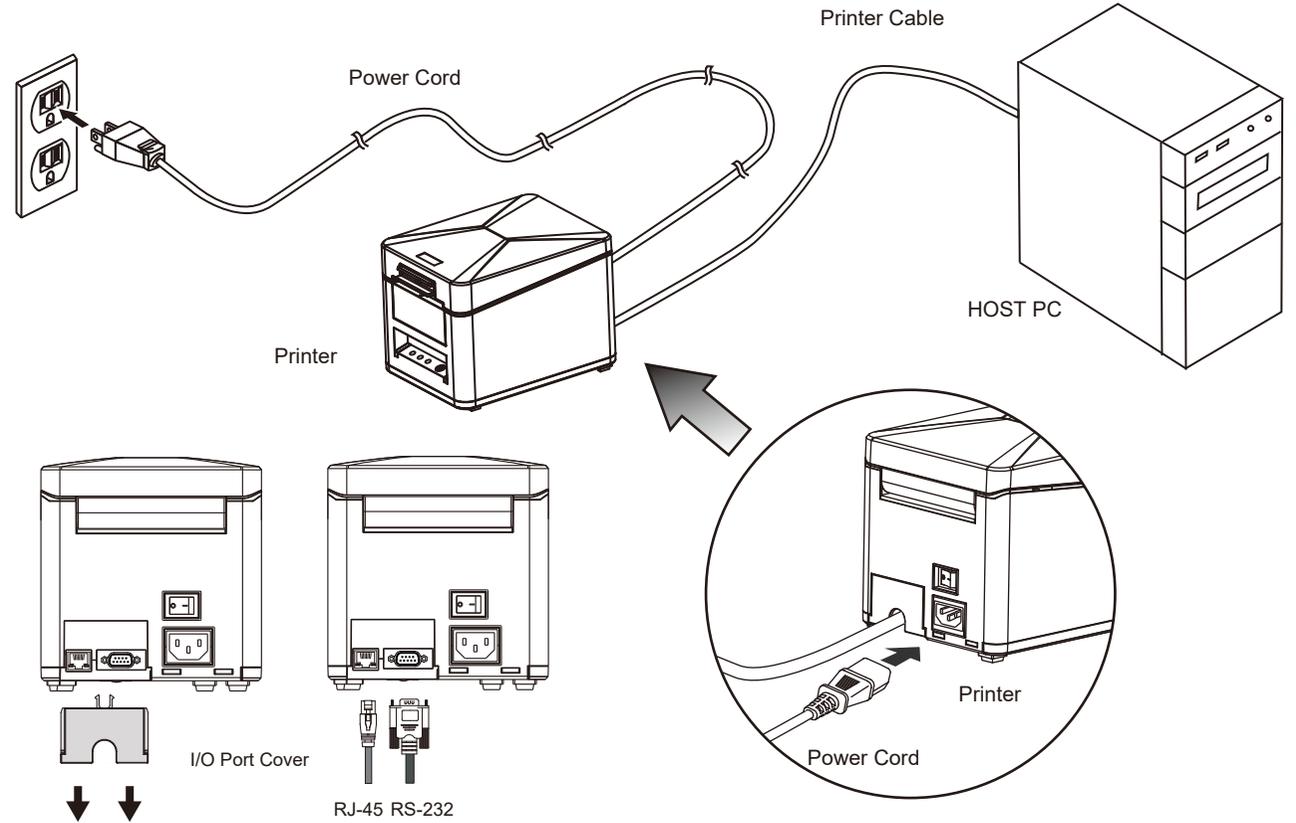

Specification

Model	PRP-350
General	
Print Method	Thermal line printing
Print Speed	250mm/sec
Print Life	150 Km
Print Font (ASCII)	ANK Font
Print Font (Graphic)	Font A: 12 x 24 dots, Font B: 9 x 17 dots Chinese character: 24 x 24 dots
Print Resolution	576 dots/line or 512 dots/line
Print Font Character Support	International Font, Big 5 Chinese, GB Chinese, Japanese, Korean selectable
Character Per Line	48 (Font A) / 42 (Font B)
Barcode Support	UPC-A, UPC-E, JAN-13/EAN-13, JAN-8/EAN-8, CODE 39, ITF, CODABAR, CODE 93, CODE 128, QR CODE
Effective Print Width	72mm
Paper Width	79.5mm±0.5mm
Paper Thickness	0.06~0.08mm
Driver	Win 2000/ Win 2003/ Win XP/Win Vista/Win 7, Win 8, compatible with EPSON and SAMSUNG, OPOS Driver support
Print Command	Compatible with ESC/POS commands set
Auto Cutter	Partial
LED Indicator	3 and 2 Auxiliary Paper Indicator
Audio Indicator	83 dB, with print job notification
Paper End Detection	Yes
Over-Heat Halt-on Protection	Yes
Interface	
Serial	1 x DB-9 Serial Port
Ethernet	1 x RJ-45
Others	
Power Input	+24VDC/2.5A (with External Adapter 100~240VAC 50/60Hz), embedded in the body
Color	Black
Compliance	FCC / CE / WEEE / RoHS
Weight	1300 g (with power adapter)
Dimension (mm)	190.5 (L) x 140 (W) x 145.0 (H)
Operating Temperature	5°C~45°C
Operating Humidity	10% ~ 80% RH non-condensing
Storage Temperature	-10°C~ 50°C

Contents



Printer Unit



**Printer Cable



*Power Cord



Quick Installation Guide




Paper Roll



Paper Roll Holder

Installing the Paper Roll

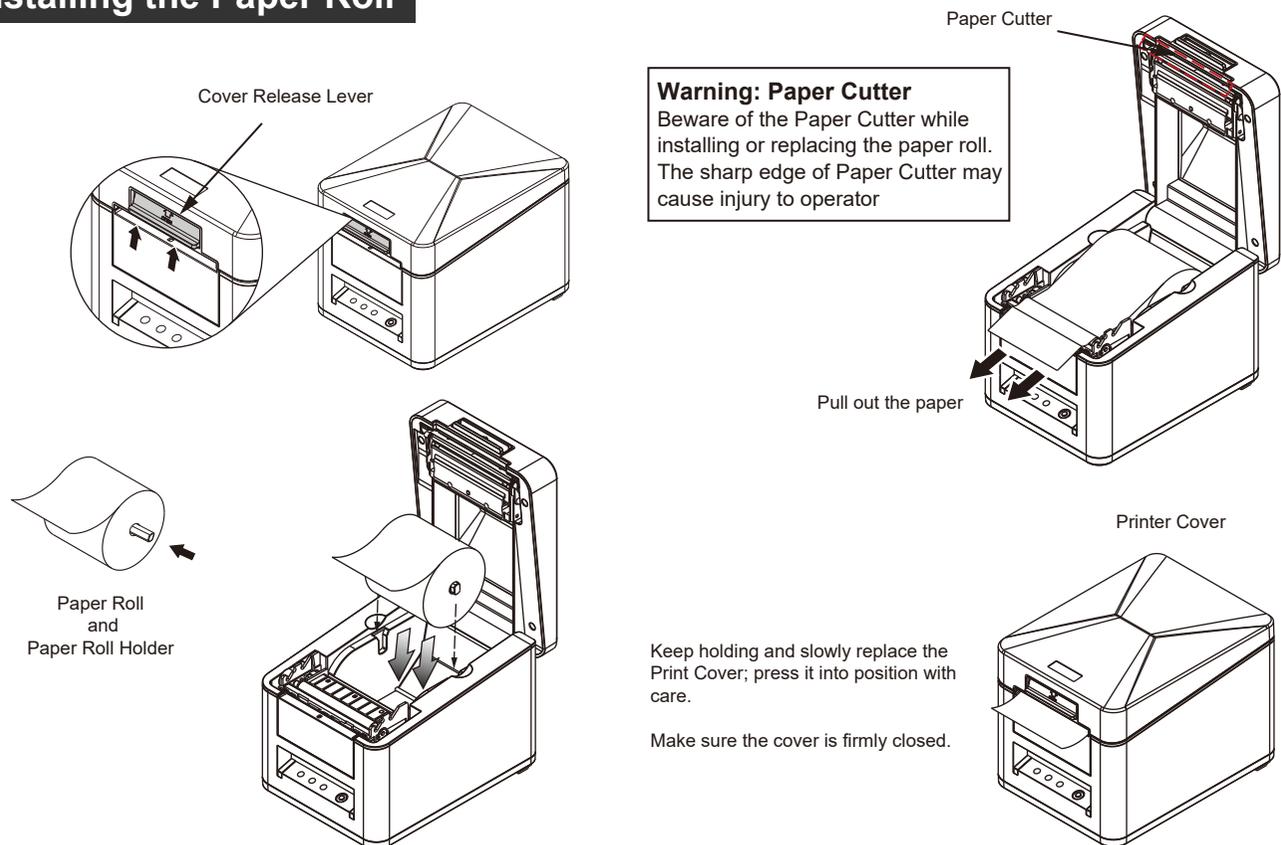


- * Power Cord is selectable depending on the types of electrical plug.
- ** Printer cable is selectable depending on the interface required (RS-232 or RJ-45)
- *** RJ-45 cable is not supplied and need purchased separately. Please refer to the nearest local representatives for further information.

Installing the Driver of The Printer


1. Access the website www.fametech.com.tw and download the driver.
2. Double click the icon "SetupPRP.EXE" to initiate the installation.




Note:
For Windows 7 / Vista and the later version, Please Right-Click the icon and use "Run as administrator" option while installing the Driver.



3. Click "Install" to continue.

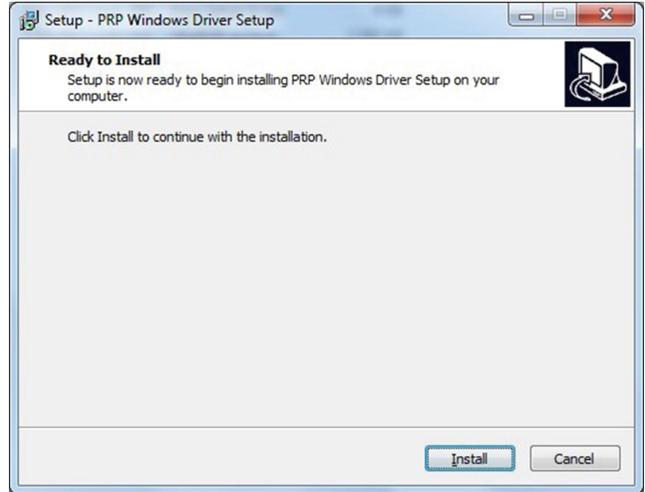


4. Select "Install this driver software anyway".

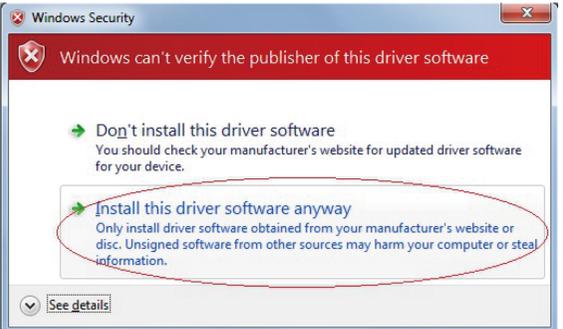


5. Enter printer name and select the port type (Serial or TCP/IP interface).

You can click the checkbox to set the printer as default printer. Click "OK" to continue.

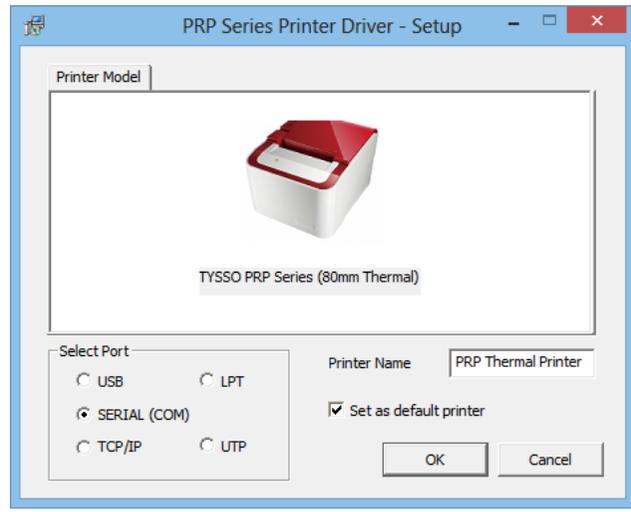

6. Select the proper Port available (for Serial or TCP/IP interface)

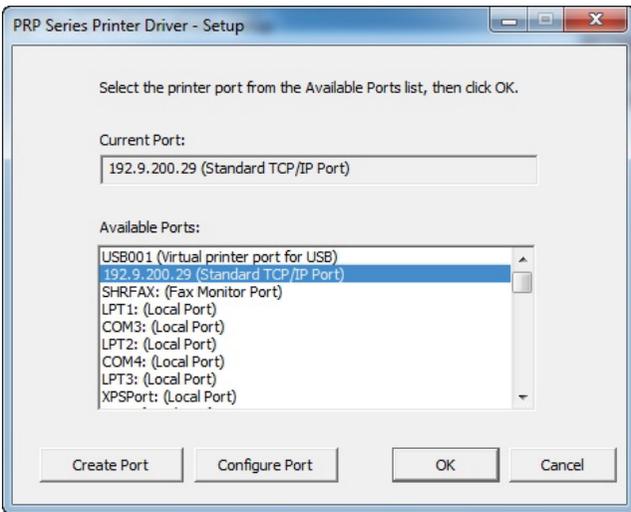


Note:
For Ethernet (TCP/IP) Interface Installation
Printing on the TCP/IP Port is only possible if both IP Address (Printer and Computer) belongs to the same class.

Please consult the IT professional before installation and refer to the instruction manual for further information.

6. The driver is successfully installed. Click "Finish" to exit the menu




7. Examine the Printer
Now user can access to the "Devices and Printers" and examine the new printer.

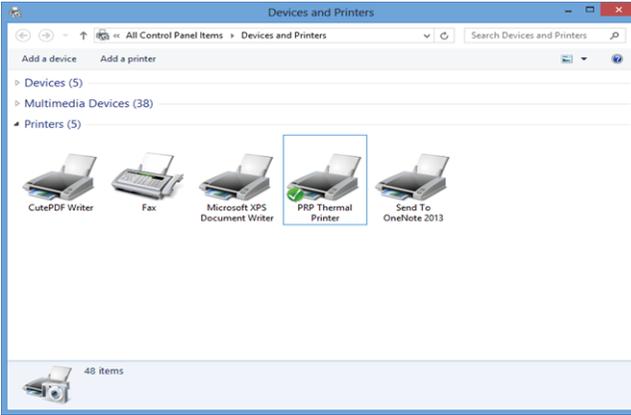

DIP Switch Configuration

To change the setting of the printer manually:

1. Turn off the printer.
2. Remove the DIP Switch Cover.
3. Adjust the DIP switches to configure the printer.
4. Re-install the DIP Switch Cover.

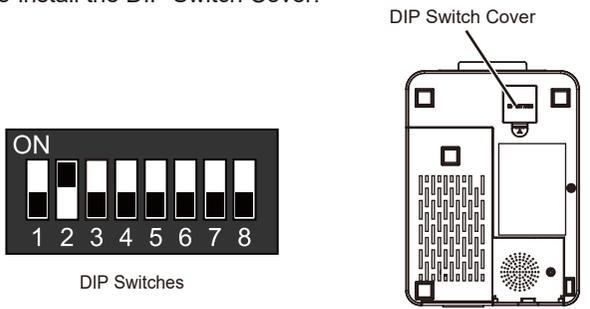

DIP	Function	ON	OFF
1	Paper Cutter	No	Yes
2	Audio Alarm	Yes	No
3	Print Density	Dark	Light
4	Two-Byte Character Code	No	Yes
5	Character Per Line	42	48
6	Printed Paper Detection	No	Yes
7 & 8	Baud Rate Setting	---	----

Baud Rate Setting

